

## 29090 TRUCK ANCHOR PIN BUSHING DRIVER, 2 PC.

Pneumatic Bushing Driver Set Removes and Installs Truck and Trailer 1-3/8" Anchor Pin Bushings and Stuck Anchor Pins.

Includes an 11-1/2" long driver that allows bushings to be driven straight without removing the hub assembly. Double-sided cone snaps onto driver to drive out and install bushings. Use flanged end to install and tapered end to remove. Also removes truck leaf spring bushings.

29090 Truck Anchor Pin Bushing Driver, 2 pc. Skin-packed. Shipping wt. 1 lb. 7 oz.

29070 Remover/Installer Cone

29080 Pneumatic Driver Assembly



## 28890 TRUCK ANCHOR PIN BUSHING DRIVER

Also Removes Truck Leaf Spring Bushings.

Pneumatic bushing driver set removes and installs truck and trailer anchor pin bushings and stuck anchor pins. Drive the bushing out with the small cone. Use the larger cone to install bushing to the proper depth.

28890 Truck Anchor Pin Bushing Driver. Skin-packed. Shipping wt. 1 lb. 2 oz.

28900 Driver

28910 Remover Cone

28920 Installer Cone



HEAVY DUTY

## 67970 67980 SNAP RING RATCHETING PLIERS, INTERNAL & EXTERNAL

Internal & External Ratcheting Snap Ring Pliers Provide a Secure Lock on Rings of Various Sizes.

Heavy duty pliers feature a spring ratchet locking mechanism to securely hold snap rings. Double dip grips help prevent losing the clip during installation or removal. Several different locking positions from 7/8" to 3-3/4" (Internal) & 1/4" to 2-3/4" (External) to provide a secure lock on multiple ring sizes. Includes four replaceable 0.12" (3mm) tip sets; straight, 15°, 45° and 90°.

67970 Snap Ring Ratcheting Pliers, Internal. Skin-packed. Shipping wt. 2 lb.

67980 Snap Ring Ratcheting Pliers, External. Skin-packed. Shipping wt. 2 lb. 2 oz.

69050 15° Tips, 2pc.

69060 45° Tips, 2pc.

69070 90° Tips, 2pc.

69080 Straight Tips, 2pc.



67970



67980

