


# Air Regulators

## For Precise Control of Air Delivery

Order No.	Model No.	Description
130516	130516	75 CFM air regulator, gauge and valve (regulator available separately as 130521)
130093	HAR-600	60 CFM air regulator, gauge and valve (regulator available separately as HAR-507)
192242	HAR-511	60 CFM air regulator — Flow through regulator for pressure tanks
130100	HAR-520	50 CFM air regulator - non-relieving (purchase GA-375 gauge separately)

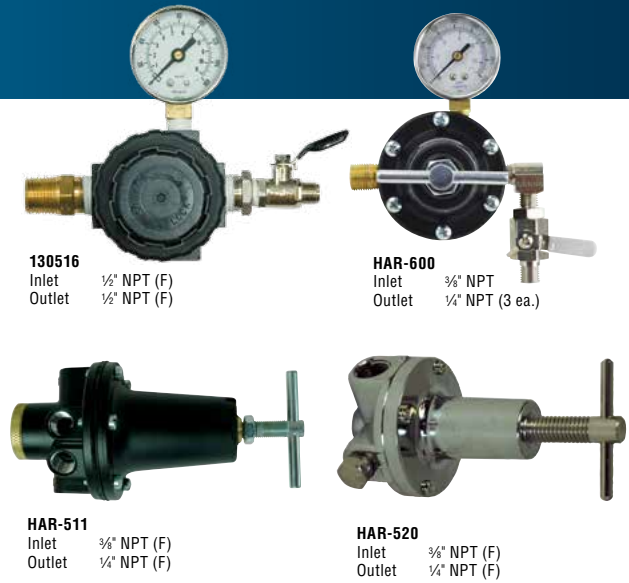

**130516**  
Inlet 1/2" NPT (F)  
Outlet 1/2" NPT (F)

**HAR-600**  
Inlet 3/8" NPT  
Outlet 1/4" NPT (3 ea.)

**HAR-511**  
Inlet 3/8" NPT (F)  
Outlet 1/4" NPT (F)

**HAR-520**  
Inlet 3/8" NPT (F)  
Outlet 1/4" NPT (F)

Refer to Service Bulletins SI-6-18-10 and SB-6-147 and Part Sheet 77-2781

**130516**

Ref. No.	Model No.	Description	Ind. Parts Req.
1	130521	Regulator Kit	1
2	VA-594	Shut-off Valve	1
3	GA-288	Gauge	1

\* Lightly grease with enclosed lubricant

Handtight plus 1/4 turn

**130100 (HAR-520)**

Ref. No.	Model No.	Description	Ind. Parts Req.
1	HAR-520	Regulator Kit	1
7	KK-5088	Repair Kit	1

**192242 (HAR-511)**

Ref. No.	Model No.	Description	Ind. Parts Req.
1	—	#10-32x9/16 Fillister Hd. Screw	6
2	HAR-14	Cover	1
3	—	Spring Button	1
4	—	Diaphragm Spring	1
5	—	Body	1
6	—	Pipe Plug 1/4" NPT(M)	1
7	—	Bottom Plug	1
8	—	Diaphragm Assy.	1
9	—	O-Ring	1
10	—	Valve	1
11	—	O-Ring	1
12	—	Spring	1
13	—	O-Ring	1

**130093 (HAR-600)**

Ref. No.	Model No.	Description	Ind. Parts Req.
1	HAR-507*	Regulator	1
2	GA-288	Gauge	1
3	—	1/4" NPT Street Elbow	1
4	VA-542	Ball Valve	1
5	—	1.4" NPT Plug	1

Air Inlet 3/8" NPT

1/4" NPT Outlet

1/4" NPT Outlet

**\*HAR-507 Regulator**

Ref. No.	Model No.	Description	Ind. Parts Req.
1	—	#10-32x9/16 Fillister Hd. Screw	6
2	HAR-14	Cover	1
3	—	Spring Button	1
4	—	Diaphragm Spring	1
5	—	Body	1
6	—	Pipe Plug 1/4" NPT(M)	1
7	KK-4977	Repair Kit (incl. # 8-13)	1
8	—	Diaphragm Assy	1
9	—	O-Ring	1
10	—	Valve	1
11	—	O-Ring	1
12	—	Spring	1
13	—	O-Ring	1
14	—	Bottom Plug	1

Ref. No.	Model No.	Description	Ind. Parts Req.
1	—	#10-32x9/16 Fillister Hd. Screw	6
2	HAR-14	Cover	1
3	—	Spring Button	1
4	—	Diaphragm Spring	1
5	—	Body	1
6	—	Pipe Plug 1/4" NPT(M)	1
7	—	Bottom Plug	1
8	—	Diaphragm Assy.	1
9	—	O-Ring	1
10	—	Valve	1
11	—	O-Ring	1
12	—	Spring	1
13	—	O-Ring	1

● Available only as part of KK-4977 Repair Kit; order separately.